



FICHA TÉCNICA DE PRODUTO

PRODUCT DATASHEET

HMI – Automação e Instrumentação, Lda.

Travessa da Indústria, nº 111
4780-573 Santo Tirso
PORTUGAL

Tel. +351 252 850 501
Fax. +351 300 013 487

Web: www.hmi.pt

Email: hmi@hmi.pt

ABB MEASUREMENT & ANALYTICS | DATA SHEET | DS/AZT6IR-EN REV. K

Aztec 600 Iron

Iron analyzer



Measurement made easy

Reliable online monitoring of iron for potable water applications

Reliable iron measurement

- automatic 2-point calibration
- automatic sample dilution to maximize range
- automatic background color compensation
- analysis of up to 3 sample streams
- extended digestion for detection of particulate and/or complex forms of iron

Easy to operate

- familiar Windows™ menu system
- built-in context-sensitive help
- data trending and analysis

Easy to maintain

- self-cleaning measurement cell
- simple-to-perform annual service
- helpful maintenance diagnostics screens

Full communications

- web and FTP enabled for easy data file access, remote viewing, and configuration
- email capability
- optional PROFIBUS® DP V1.0

Introduction

The Aztec 600 colorimetric series of analyzers from ABB are a range of range of compact, yet reliable, online colorimetric analyzers for the key parameters in water treatment.

They combine the unique Aztec fluid handling system with the latest electronics platform, featuring Windows menu-driven software to create a range of analyzers simple to operate and maintain, capable of measuring up to three sample streams.

The Aztec 600 Iron analyzer has been designed specifically for the measurement of iron in potable water applications. It offers reliable and accurate online analysis of iron up to 5 ppm.

All the sample and chemical fluid handling for measurement, mixing, and disposal is controlled precisely by the patented Aztec fluid handling system that cleans the measuring cell with every movement.

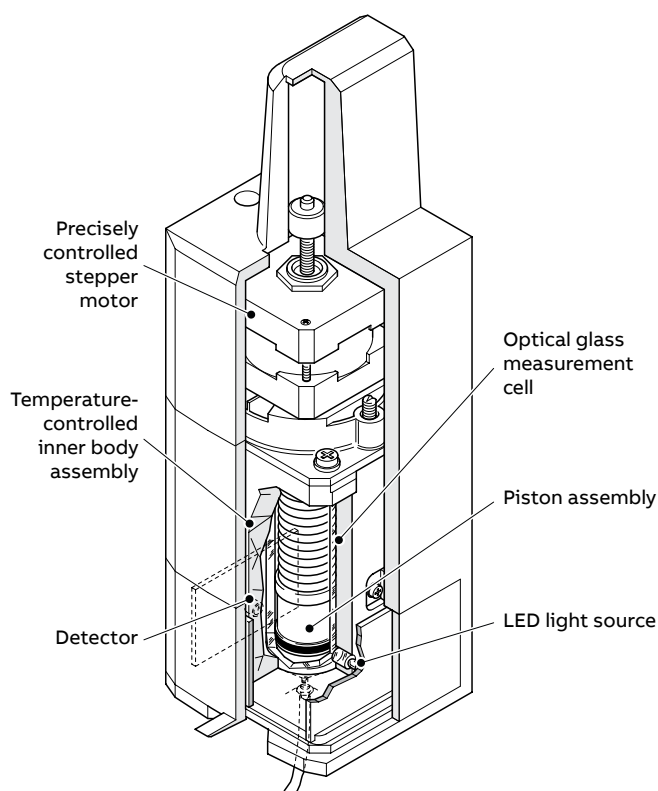


Figure 1 Measuring head detail

Users of this system also benefit from the Aztec 600 Iron's low maintenance requirements, ease of use, autocalibration, adjustable frequency of measurement and proven chemistry methodology.

Process data, as well as the content of alarm and audit logs, can be saved to a removable SD™ card for record keeping and analysis using ABB's DataManager Pro data analysis software.

User benefits of online iron monitoring

The task of managing the quantity of water resources and the quality of drinking water today is unimaginable without online instrumentation that helps water utilities manage, treat, and deliver drinking water to consumers.

Online monitoring provides plant operators with an early warning of any changes to the treatment process, enabling operational decisions to be made in near real-time. This level of process control is not possible with manual testing alone, where potentially important events that occur between less frequent manual sampling can be missed.

Users of the Aztec 600 Iron analyzer benefit from:

- Improvements in process control
 - enables operational decisions to be made in near real-time.
- Improvements in process reliability
 - detect process failures before they affect the quality of the water leaving the plant.
- Process optimization for water quality
 - increased plant efficiency.
- Potential capital and operating cost reductions
 - reduction in chemical and energy usage.
- Continual monitoring of remote or unstaffed sites
 - improved response times and reduced visits saving money and time whilst lowering carbon footprint.
- Improved reporting
 - analyzer audit trail data can be used to assure customers and regulators of process efficiency and consistent product quality.


Applications

Typical applications for the Aztec 600 Iron are:


- Iron removal from drinking water:
 - monitoring of source water iron levels from either surface waters or boreholes. Seasonal changes and water level tables can have a significant affect or influence the concentration of iron in source waters.
 - measurement of water post-aeration/filtration to monitor removal process/efficiency.
- Monitoring of iron-based coagulants used in drinking water:
 - monitoring of iron residuals in surface waters treated with iron-based coagulants to help optimize the coagulation process and ensure final iron residuals in treated water comply with legislation.
 - monitoring of the effluent discharge from the sludge holding tanks.

Overview of the Aztec 600 Iron analyzer


Easy-to-use Windows-based menu system

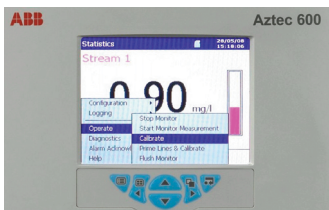

Graphical trending of results

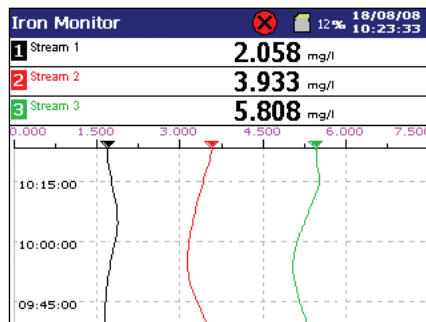


Flexible communications

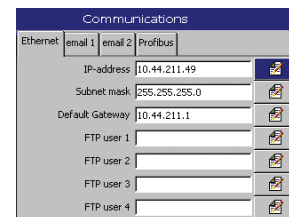

- Ethernet connectivity
- 6 mA outputs
- 10 Alarm relays (configurable)
- PROFIBUS DP v1.0
- SD card
- Process data trends

Simple navigation

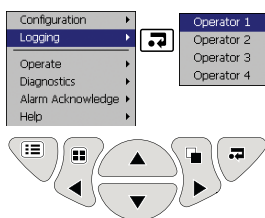

Advanced optics


- Automatic LED intensity adjustment at every calibration – eliminates drift and compensates for any cell fouling
- Temperature-controlled for optical stability
- Automatic 2-point calibration
- Automatic sample dilution to maximize measurement range
- Background sample color compensated for

Single or multistream options

- Integrated side-sample pot for ease of plumbing
- Magnetic sample flow switch alarms when sample is not present

Simplified fluid handling

- Single piston pump draws in precise volumes of reagents and samples through a valve manifold into the optical measuring cell
- Air is used in the chemical sequence for mixing and purging the reagents and sample
- Piston movement provides mechanical cleaning of the measurement cell

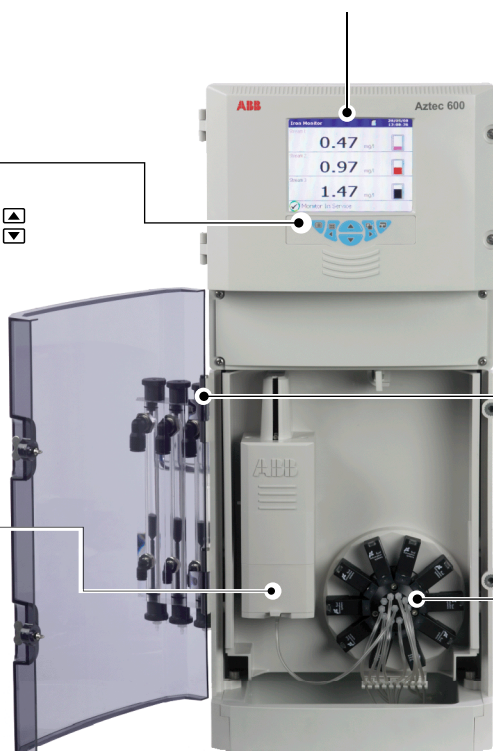

Reliable measurement

The Aztec 600 Iron is an online colorimetric analyzer. It has been designed for ease-of-use and maintenance simplicity, while offering the benefits of flexible communication and advanced data acquisition.

The Aztec 600 Iron can measure up to six samples per hour using the industry standard TPTZ (tripyridyl-triazine) reaction chemistry, measuring both the ferrous and ferric iron content.

A fully programmable multistream option is available, providing up to 3-stream capability with user-programmable stream sequencing.

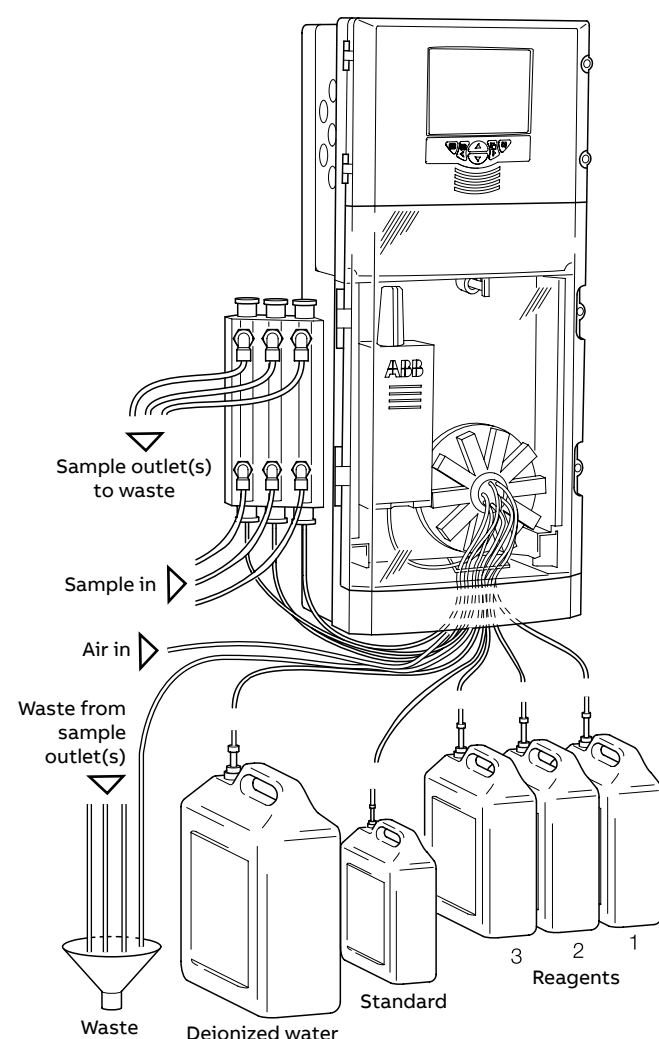


Figure 2 Example of multistream installation

Fluid handling

A single piston pump provides all the sample and chemical fluid handling for measurement, mixing, and disposal. The pump is stepper motor-controlled for repeatability and precision.

This 'motorized syringe' approach has the added benefit of wiping the optical cell on every movement of the piston, resulting in a highly efficient automatic cleaning process.

This is particularly important when measuring waters where optical contamination can be a real issue without having stringent automatic cleaning.

Measurement technique

The optical cell is rinsed thoroughly with the sample before measurement, eliminating dead zones and enabling multistream measurement across different samples without cross-contamination.

To correct for any natural coloration of the sample, the background absorbance of the sample is measured prior to the addition of any color-forming reagents to provide a sample blank.

The sample then undergoes a warm acid digest in the temperature-controlled optical measurement cell for 5 minutes. This pretreatment step is usually sufficient to convert all forms of iron to those that react with the color-forming TPTZ reagent that is added last.

Instead of using a mechanical stirring system, the piston and optical sensor is utilized further by drawing in air after the sample and reagents are introduced. This provides turbulence and efficient mixing without any of the cost and maintenance drawbacks of mechanical and electrical mixing systems.

The Aztec 600 Iron analyzer has the capability to enable an automated chemical cleaning routine. This programmable rinse routine enables a separate acid/alkali or biocide to be drawn through the sample tubing and optical cell.

Extended digestion

In drinking water applications, where forms of iron other than 'reactive' are present, a version of the analyzer is available with extended reaction time. This version extends the measurement cycle, allowing for improved detection of particulate and/or complex forms of iron.

In addition, the analyzer is equipped with an improved side sample pot, which is able to cope with higher solids content.

Simple to operate

The powerful and user-friendly Windows menu-driven software enables users to operate the analyzer with the minimum amount of training.

The comprehensive range of available menu screens is simple to access using the six membrane keys.

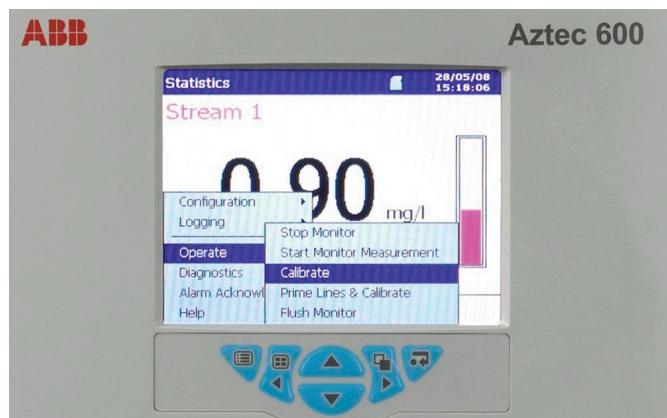


Figure 3 Windows-based interface

These menus include data logging and graphical trending screens, operation command screens, full setup configuration screens and a range of self-diagnostics (including full calibration and operating status screens).

Historical logs provide operators with access to alarm logs and audit trail data. Process data and historical logs are archived securely to a removable SD card.

All information is displayed clearly on the easy-to-read 145 mm (5.7 in) color LCD display and is available in a range of languages.



Figure 4 Communications window

Simple to maintain

The Aztec 600 colorimetric range is designed to be as maintenance-free as possible. The inherent product design and autocalibrating features reduce the amount of maintenance required to external cleaning of sample lines, changing of reagents and annual servicing.

Table 1 Service schedule

Period	Schedule
12 monthly	Replace piston assembly and sample tubing
24 monthly	Replace valve diaphragms, piston assembly and monitor tubing

All parts are provided in convenient maintenance kits.

Solution replacement

The Aztec 600 Iron analyzer uses a total of approximately 25 mL of sample per analysis: 7.5 mL for the actual measurement, and the remainder for cell rinsing. The automatic 2-point calibration substitutes the sample with the calibration solutions at the same amount.

Above 1.000 ppm Fe, the Aztec 600 Iron dilutes samples automatically with deionized water, to maximize the measurement range. The dilution ratio between sample and deionized water is user-configurable between: 1:1, 1:2, 1:3, and 1:4.

Table 2 Dilution ratio between sample and deionized water

Dilution ratio	Approximate volume of deionized water used per measurement
1:0	0 mL
1:1	12.5 mL
1:2	16.5 mL
1:3	19 mL
1:4	20 mL

A standard set of reagents consists of three reagents (5 L of each) and a high standard (2.5 L). The reagent usage depends on how many samples per hour are being measured.

Table 3 Reagent usage

Samples per hour	Duration of reagent set (days)
6	40
4	60
3	80
2	120
1	240

Flexible communications

Ethernet ready

The Aztec 600 provides 10BaseT Ethernet communications via a standard RJ45 connector and uses industry-standard protocols TCP/IP, FTP, and HTTP. The use of standard protocols enables easy connection into existing PC networks.

Data file access via FTP (File Transfer Protocol)

The Aztec 600 features FTP server functionality. The FTP server in the analyzer is used to access its file system from a remote station on a network. This requires an FTP client on the host PC. Both MS-DOS® and Microsoft® Explorer version 5.5 or later can be used as an FTP client.

- Using a standard web browser or other FTP client, data files contained within the analyzer's memory or memory card can be accessed remotely and transferred to a PC or network drive.
- Four individual FTP users' names and passwords can be programmed into the Aztec 600. An access level can be configured for each user.
- All FTP log-on activity is recorded in the audit log of the analyzer.
- Using ABB's data file transfer scheduler program, data files from multiple analyzers can be backed-up automatically to a PC or network drive for long-term storage, ensuring the security of valuable process data and minimizing the operator intervention required.

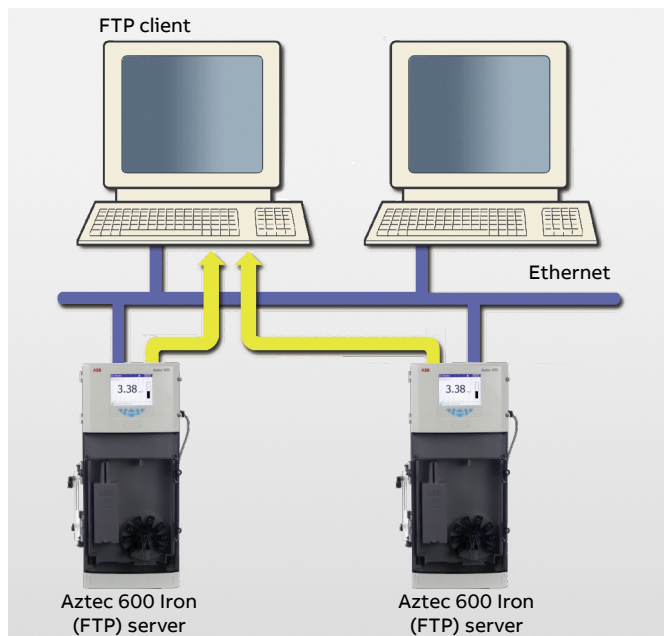


Figure 5 Data file access via FTP

Embedded web server

The Aztec 600 Iron has an embedded web server that provides access to web pages created within the analyzer. The use of HTTP (Hypertext Transfer Protocol) enables standard web browsers to view these pages.

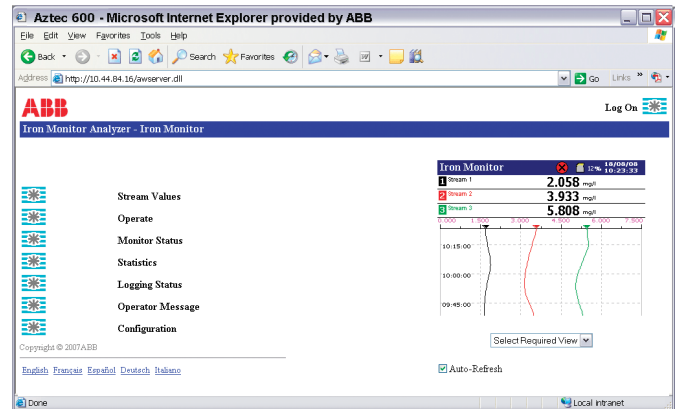


Figure 6 Embedded web server

- Accessible through the web pages are the current display of the analyzer, detailed information on stream values, reagent and solution levels, measurement status and other key information.
- The audit and alarm logs stored in the analyzer's internal buffer memory can be viewed on the web pages.
- Operator messages can be entered via the web server, enabling comments to be logged to the analyzer.
- The web pages and the information they contain are refreshed regularly, enabling them to be used as a supervision tool.
- The analyzer's configuration can be selected from an existing configuration in the internal memory or a new configuration file transferred to the analyzer via FTP.
- The analyzer's real-time clock can be set via the web server. Alternatively, the clocks of multiple analyzers can be synchronized using ABB's File Transfer Scheduler software.

Email notification

Via the Aztec 600 Iron's built-in SMTP client, the analyzer is able to email notification of important events. Emails triggered from alarms or other critical events can be sent to multiple recipients. The analyzer can also be programmed to email reports of the current measurement status or other parameters at specific times during the day.

PROFIBUS

The Aztec 600 Iron can be equipped with PROFIBUS DP V1.0 to enable full communications and control integration with distributed control systems.

Specifications

Measurement range

Iron

Autoranging	0 to 5.000 ppm Fe
Undiluted range	0 to 1.000 ppm Fe
Diluted range	1 to 5.000 ppm Fe

Chemical method

Iron

Tripyridyl-triazine (TPTZ)

Background color correction

Compensated at the measurement wavelength

Self-cleaning

Programmable automatic chemical rinsing – piston cleaned every measurement

Measurement mode

Batch measurement

User-selectable 1 to 6 measurements per hour¹

Sample streams

Single or up to 3 streams – sequencing is programmable

Measurement performance

Accuracy²

<±5 % of reading³ or ±0.005 ppm
(whichever is the greater)

Repeatability

<±5 % of reading⁴ or ±0.005 ppm
(whichever is the greater)

Resolution

0.001 ppm or 1 ppb

Measurement units

mg/L, ppm, ppb, µg/L

Calibration

2-point, automatic calibration, with the option of manual initiation. The interval between automatic calibrations manually selectable from four times a day to once per week.

Environmental data

Ambient operating temperature

5 to 45 °C (41 to 113 °F)

Ambient operating humidity

Up to 95 % RH noncondensing

Sample temperature

1 to 40 °C (32 to 104 °F)

Sample flow

Continuous, 200 to 500 mL/min

Sample pressure

5 psi maximum

Sample limitations

Samples containing particles 100 µm (0.004 in) in diameter or larger may require prefiltration

Maintenance

Routine service interval

12 months

Reagent consumption

0.75 mL of each reagent per measurement

Display

- Color, TFT, liquid-crystal display (LCD) with built-in backlight and brightness adjustment
- Diagonal display area 145 mm (5.7 in)
- 76,800 pixel display⁵

Dedicated operator keys

- Group select/left cursor
- View select/right cursor
- Menu key
- Up/Increment key
- Down/Decrement key
- Enter key

¹ When extended digestion is selected (AW633/ X.X.X.X.X.1), the batch measurement will be reduced.

² Maximum measured error across full measurement range.

³ Tested in accordance with **IEC 61298 Parts 1-4 : Edition 2.0 2008-10**.

⁴ Tested in accordance with **BS ISO 15839 : 2003**.

⁵ A small percentage of the display pixels may be either constantly active or inactive. Max. percentage of inoperative pixels <0.01 %

Mechanical data

Ingress protection

IP31¹

Sample connections

Inlet: 6 mm OD push-fit × ¼ in BSP elbow
 Outlet: 10 mm OD push-fit × ⅜ in BSP elbow

Dimensions

Height 653 mm (25.7 in)
 Width 366 mm (14.4 in) max.
 Depth 183 mm (7.2 in) door closed
 430 mm (16.9 in) door open
 Weight 15 kg (33 lb)

Materials of construction

Electronics enclosure 10 % glass loaded polycarbonate
 Main enclosure Noryl®
 Lower tray 20 % glass loaded polypropylene
 Door Acrylic

Electrical

Power supply ranges

- 100 to 240 V max. AC, 50/60 Hz ±10 %
 (90 to 264 V AC, 45/65 Hz)
- 18 to 36 V DC (optional)

Power consumption

75 W max. – AC
 100 W max. – DC

Analog outputs

Single and multistream analyzers

6 isolated current outputs, fully assignable and programmable over a 0 to 20 mA range
 (up to 22 mA if required)

Alarms/relay outputs

Single and multistream analyzers

One per unit:

- Stop relay
- Attention relay
- Failure relay
- Calibrate relay

Six per unit:

- Fully user-assignable alarm relays

Rating

Voltage	250 V AC	30 V DC
Current	5 A AC	5 A DC
Loading (noninductive)	1,250 VA	150 W

Connectivity/communications

Ethernet connection

Web server with FTP – for real-time monitoring, configuration, data file access and email capability

Communications

PROFIBUS DP V1.0 (optional)

Data handling, storage and display

Security

Multilevel security Operator and configuration password or security switch

Storage

Removable SD card

Trend analysis

Local and remote

Data transfer

SD card or FTP

Approvals, certification and safety

Safety approval

cULus

CE Mark

Covers EMC & LV Directives
 (including latest version EN 61010)

General safety

- EN61010-1
- Overvoltage Class II on inputs and outputs
- Pollution category 2

EMC

Emissions & immunity

Meets requirements of IEC61326 for an industrial environment

¹ Not evaluated for UL or CB.

Dimensions

Dimensions in mm (in)

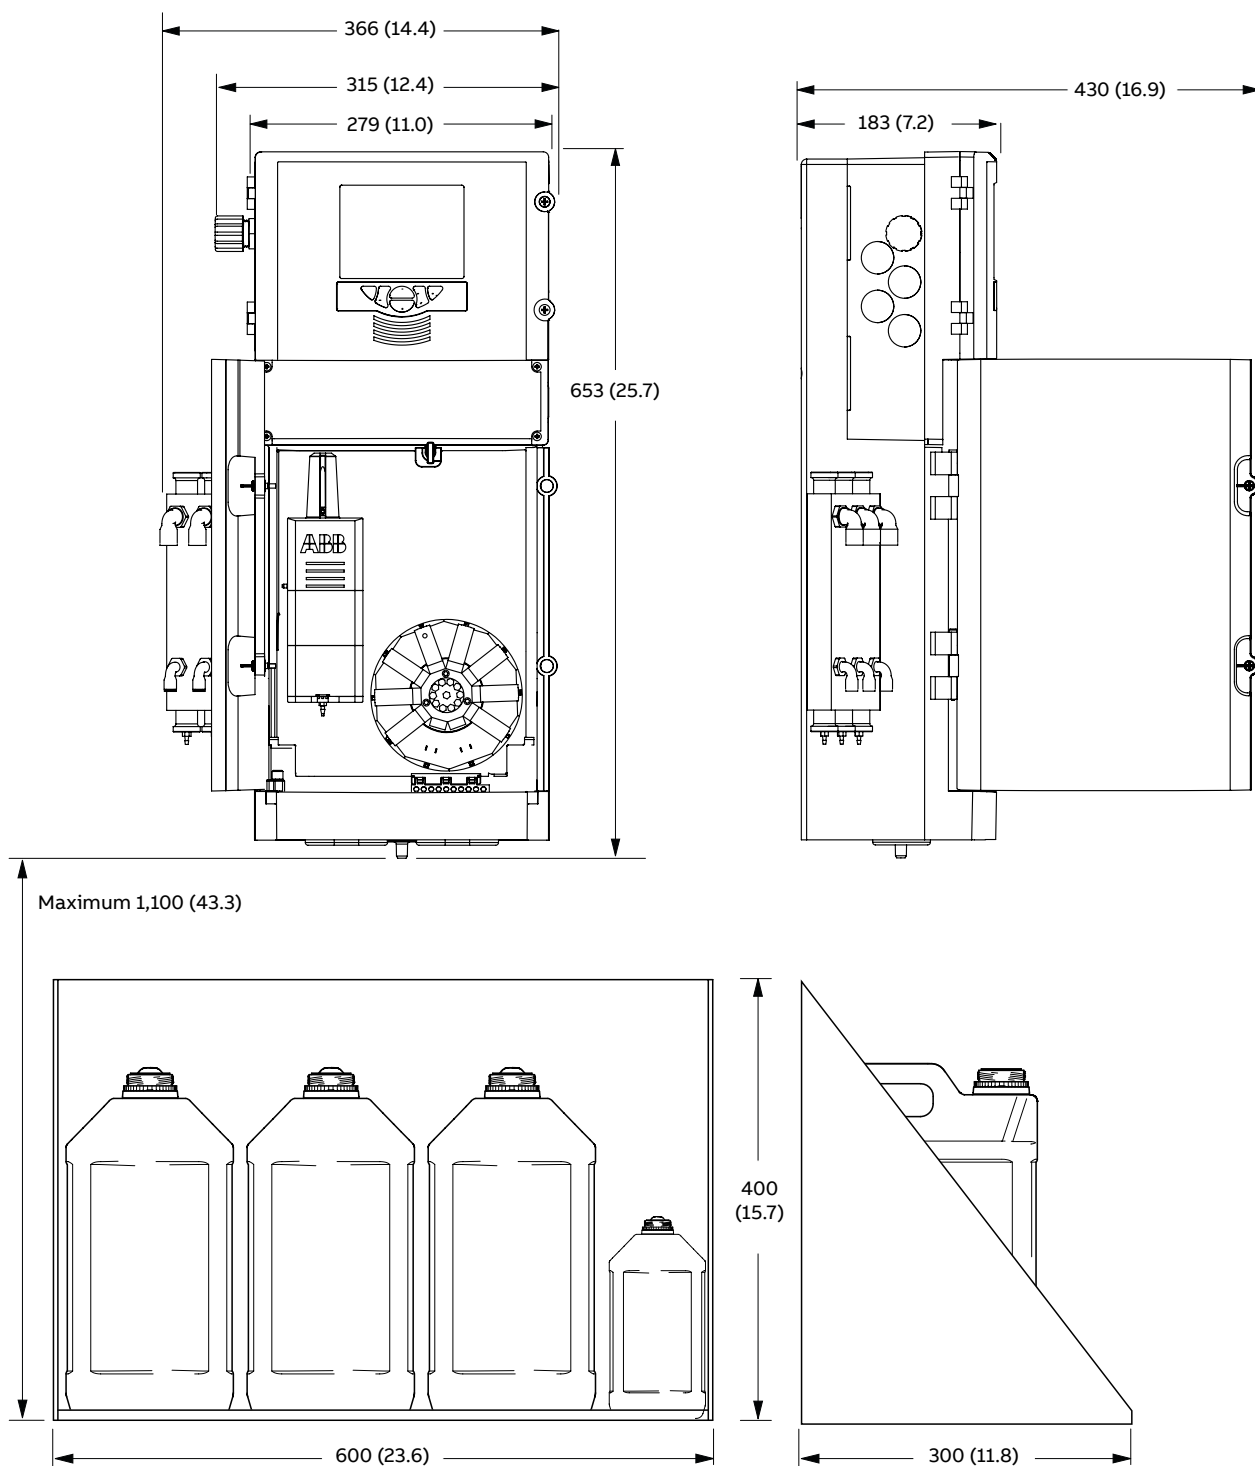


Figure 7 Overall dimensions of Aztec 600 analyzer and optional reagent support tray

Electrical connections

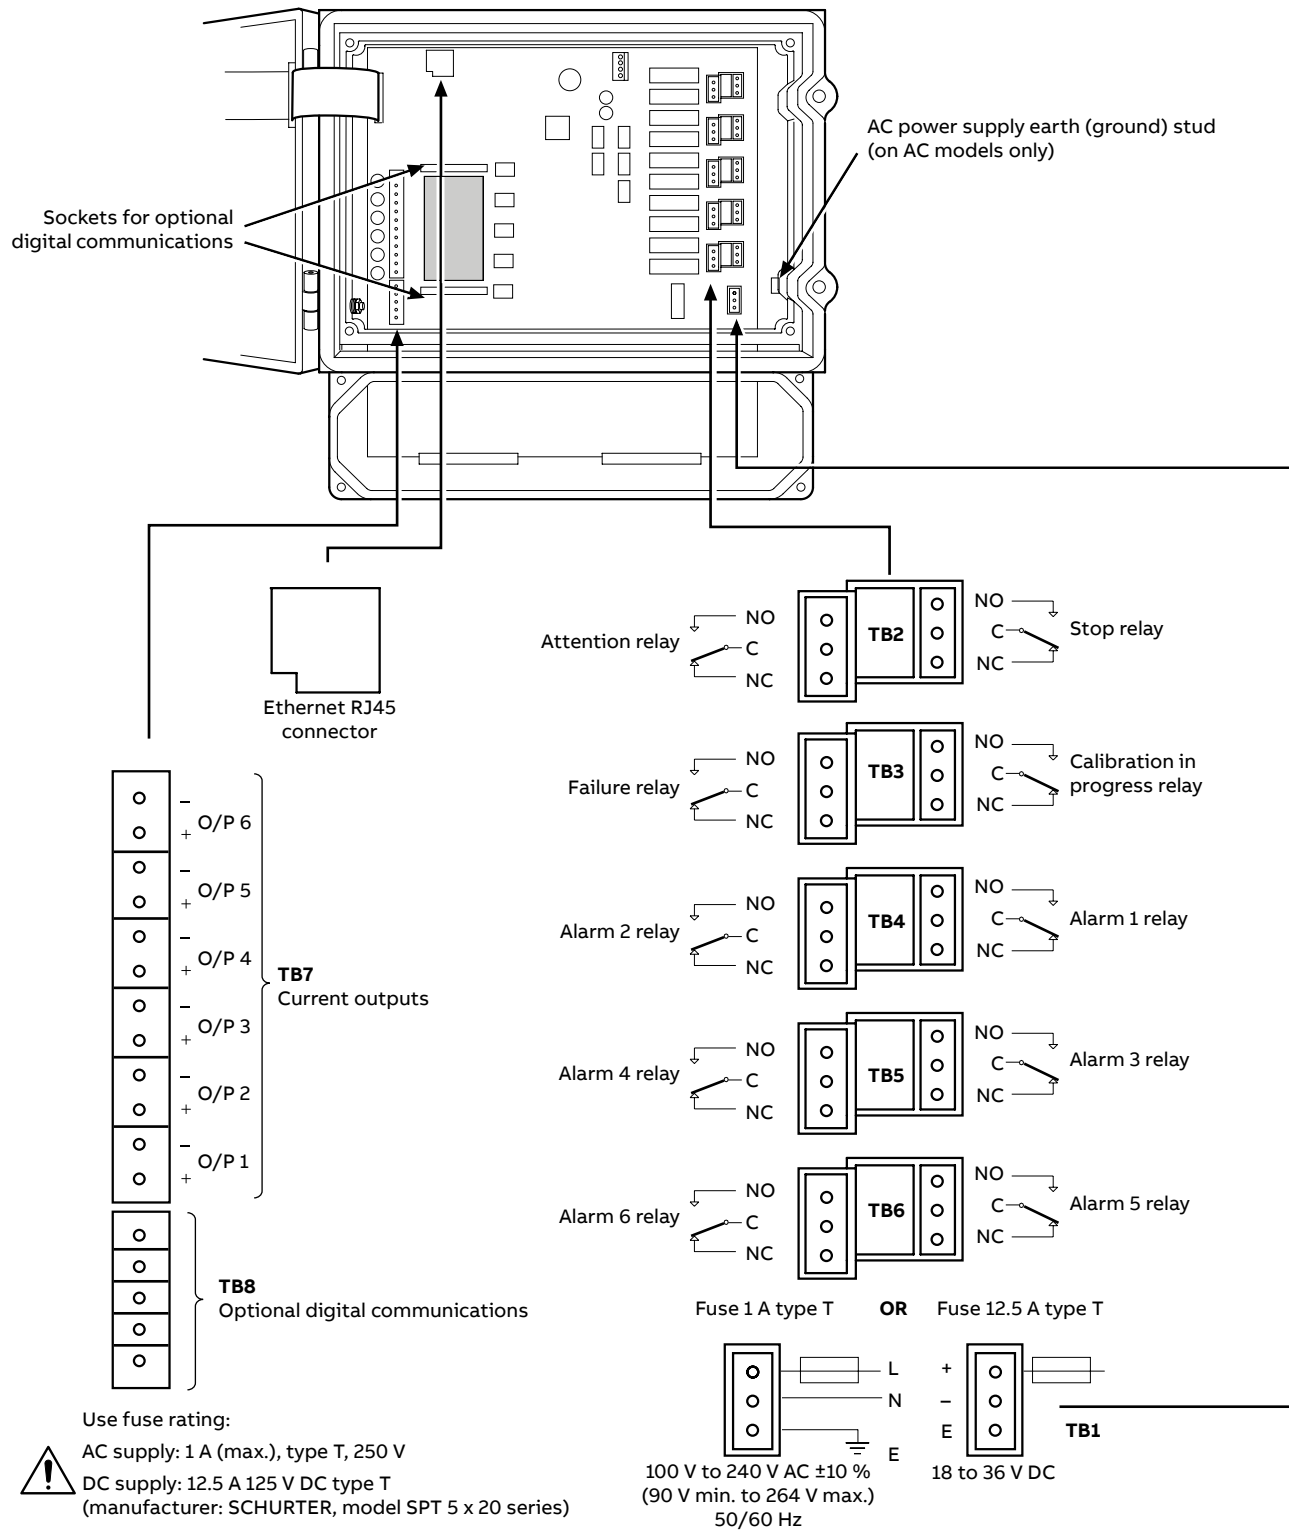


Figure 8 Electrical connections


Ordering information

Aztec 600 Iron analyzer	AW633/	X	X	X	X	X	X	X	X
Range									
0 to 5.000 ppm	5								
Number of streams									
Measuring 1 stream		1							
Measuring 1 stream with additional valve for cleaning		2							
Measuring 3 streams		3							
Communications									
None			0						
PROFIBUS DP V1.0			1						
Enclosure									
Standard				0					
Power supply									
90 to 264 V AC / 50 to 60 Hz					0				
18 to 36 V DC					1				
Extended digestion – for drinking water applications¹									
Not required							0		
Required ²							1		
Instruction manual									
English								1	
French								2	
Italian								3	
German								4	
Spanish								5	
Portuguese								7	
Polish								8	
Certification									
None									0
Certificate of calibration									1

¹ Contents includes extended digestion software and modified side sample pot.

² Only available with AW636/51 or AW636/52 (1 stream, or 1 stream with additional valve for cleaning).

Accessories

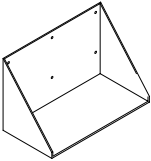Part number	Description	
03-0051-A	Reagent support tray (stainless steel)	

Sales



Service



Software



Acknowledgements

- Windows, Microsoft, MS-DOS and Internet Explorer are registered trademarks of Microsoft Corporation in the United States and/or other countries.
- Noryl is a registered trademark of SABIC Innovative Plastics IP B.V.
- PROFIBUS is a registered trademark of PROFIBUS Nutzerorganisation e.V.
- SD is a trademark of SD-3C LLC.

ABB Measurement & Analytics

For your local ABB contact, visit:
www.abb.com/contacts

For more product information, visit:
www.abb.com/measurement

We reserve the right to make technical changes or modify the contents of this document without prior notice. With regard to purchase orders, the agreed particulars shall prevail. ABB does not accept any responsibility whatsoever for potential errors or possible lack of information in this document.

We reserve all rights in this document and in the subject matter and illustrations contained therein. Any reproduction, disclosure to third parties or utilization of its contents – in whole or in parts – is forbidden without prior written consent of ABB.

© Copyright 2023 ABB.
All rights reserved.



Our offering:

	Actuators and Positioners		Analytical Instruments
	Device Management, Fieldbus and Wireless		Flow Measurement
	Force Measurement		Level Measurement
	Natural Gas Measurement		Pressure Measurement
	Recorders and Controllers		Temperature Measurement

HMI – Automação e Instrumentação, Lda.

Travessa da Indústria, nº 111
4780-573 Santo Tirso
PORTUGAL

Tel. +351 252 850 501
Fax. +351 300 013 487

Web: www.hmi.pt

Email: hmi@hmi.pt